



Assembly Instruction


INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

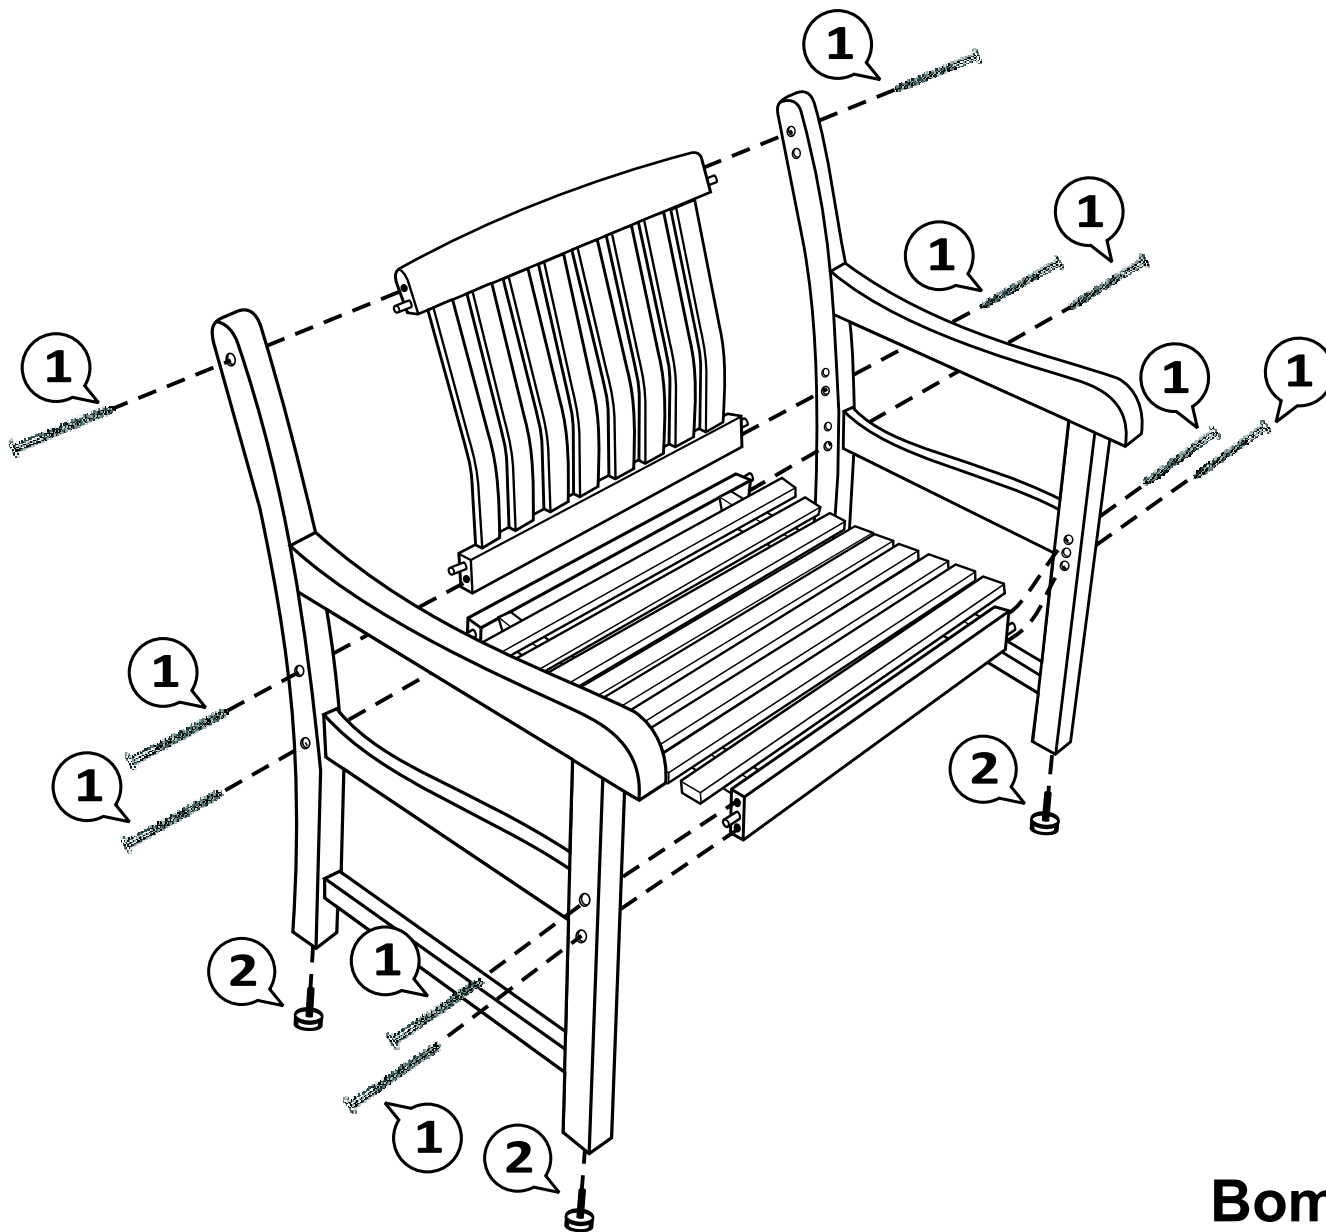

F-screw 6.5x70 x 10 PCS



Bench foot black, P x 4 PCS

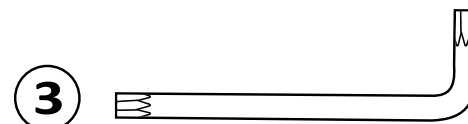

Socket Wrench 4m/m Ht x 1 PCS

Boma Newstyle Armchair