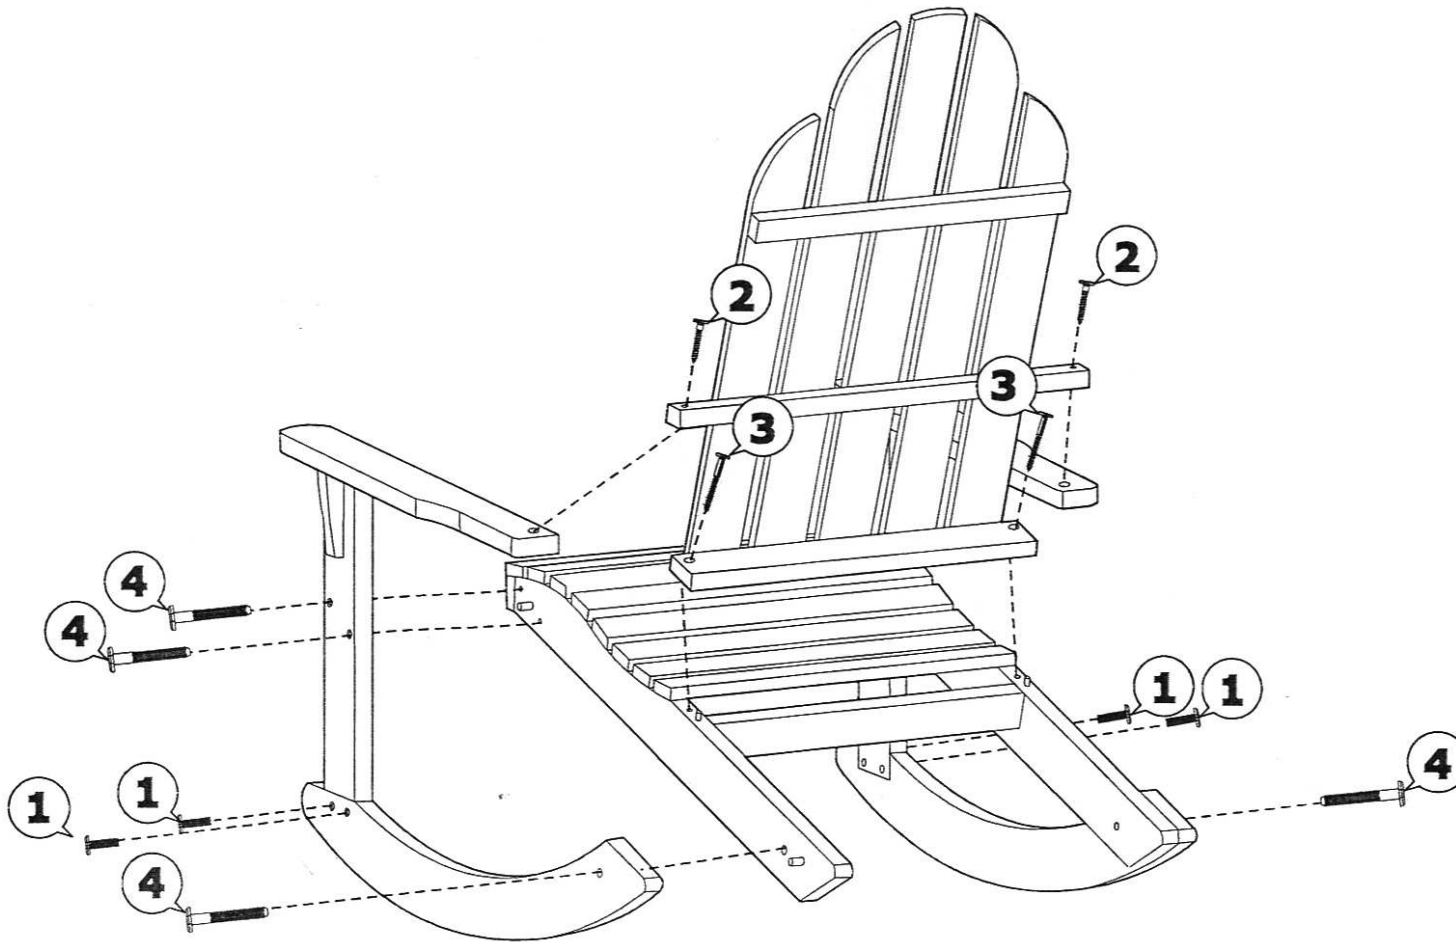







Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING



- 1** 
F-bolt M6x20x13-T30, GS x 4 PCS
SEM201412
- 2** 
F-screw 6x40-T30, GS x 2 PCS
SEM201425
- 3** 
F-screw 6x60-T30, GS x 2 PCS
SEM201427
- 4** 
F-bolt M6x50x13-T30, GS x 6 PCS
SEM201417
- 5** 
Torx key T30, GS x 1 PCS
SEM201430

Adirondack Rocking Chair