



# Assembly Instruction


INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
SAMLEVEJLEDNING

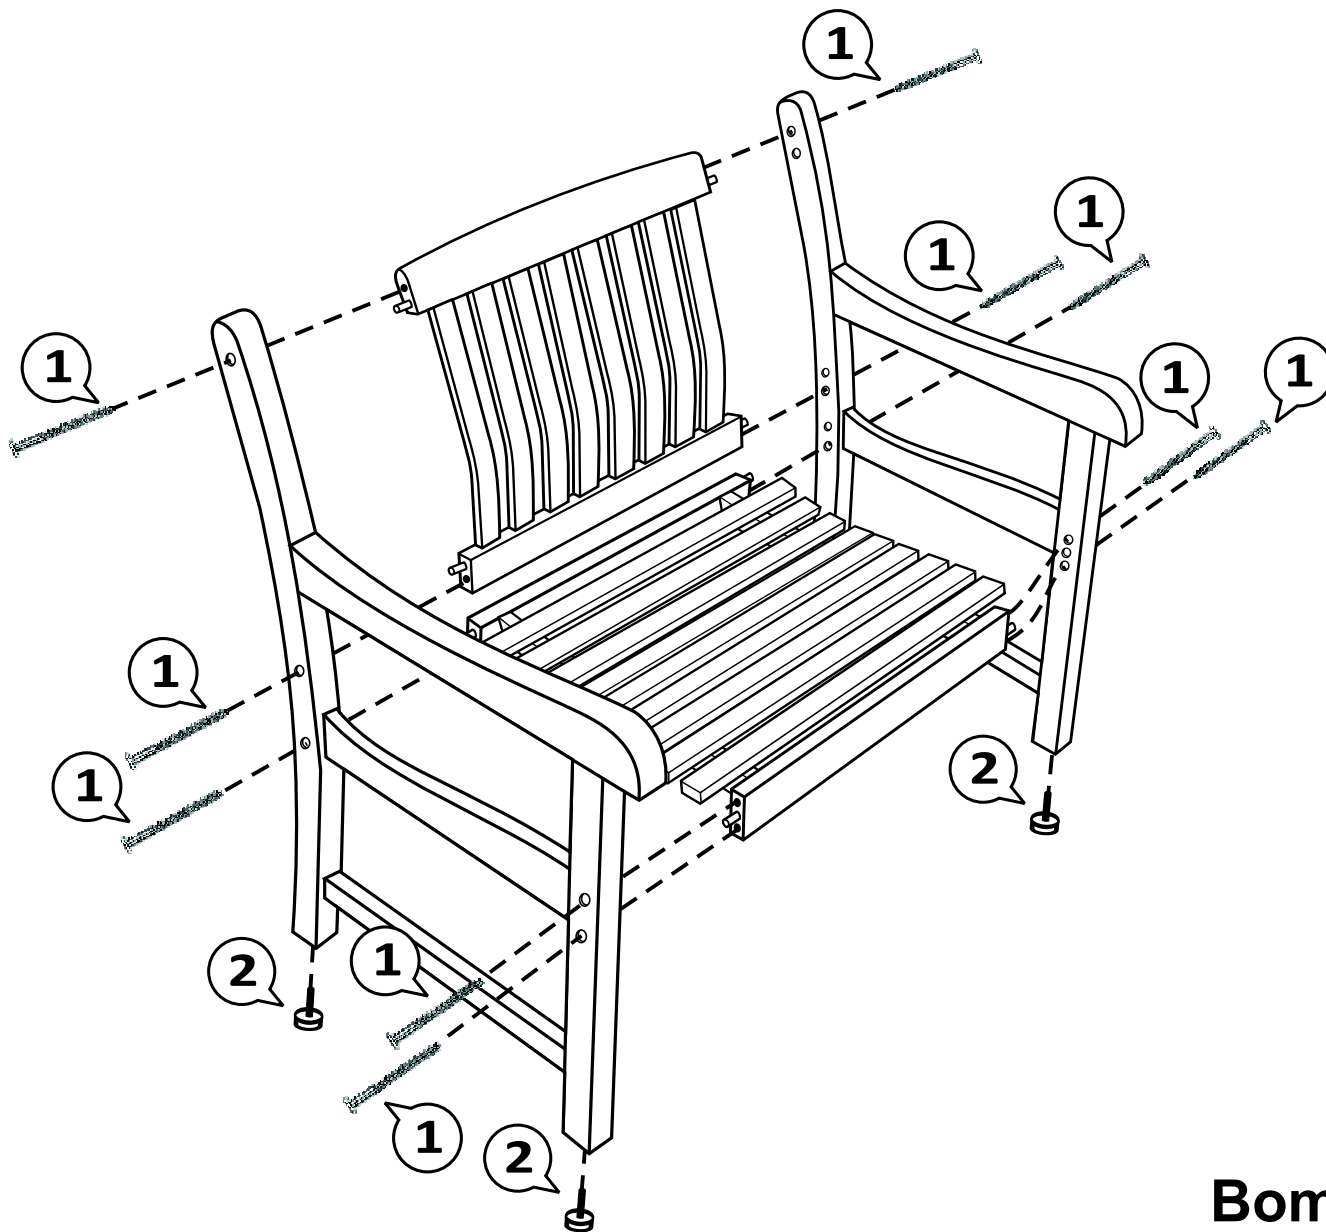

F-screw 6.5x70 x 10 PCS



Bench foot black, P x 4 PCS

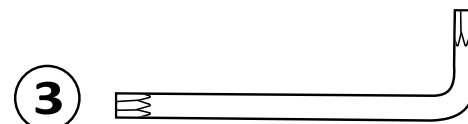

Socket Wrench 4m/m Ht x 1 PCS

## Boma Newstyle Armchair